


FRONT AXLE HUB BOLT
COMPONENTS

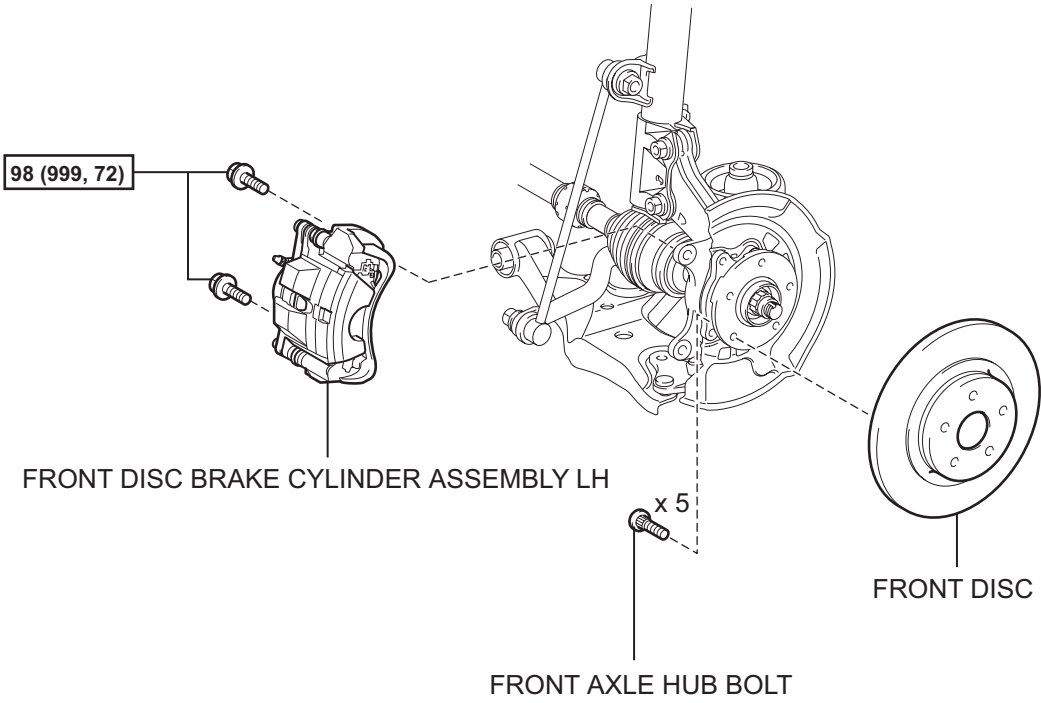

N*m (kgf*cm, ft.*lbf) : Specified torque

REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are the LH side.

1. REMOVE FRONT WHEEL



2. REMOVE FRONT DISC BRAKE CYLINDER ASSEMBLY LH (See page [BR-40](#))

3. REMOVE FRONT DISC (See page [BR-42](#))

4. REMOVE FRONT AXLE HUB BOLT

- (a) Using SST, remove the hub bolt that needs to be replaced.

SST 09650-17011

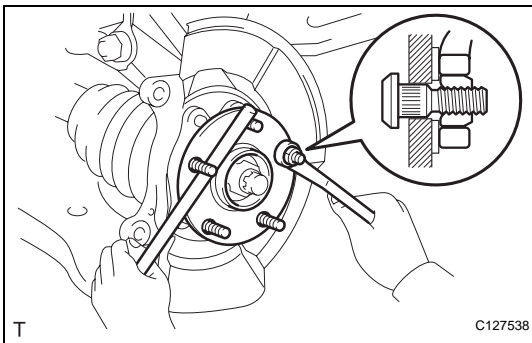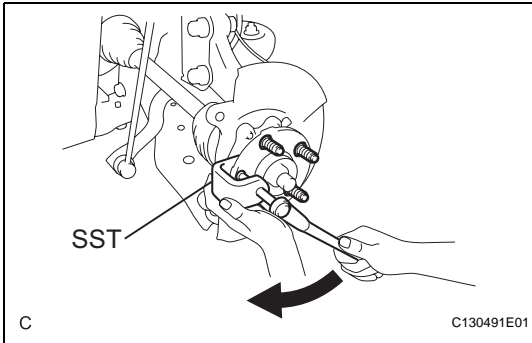

5. INSTALL FRONT AXLE HUB BOLT

- (a) Insert a new hub bolt into the bolt hole. Set a plate washer and nut on the hub bolt end.
- (b) Using a brass bar or equivalent to hold the front axle, install the hub bolt by tightening the nut. Then remove the nut and plate washer.

6. INSTALL FRONT DISC (See page [BR-43](#))

7. INSTALL FRONT DISC BRAKE CYLINDER ASSEMBLY LH (See page [BR-46](#))

8. INSTALL FRONT WHEEL

Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)